



536-95, 538-60, 538-60,
542-70, 560-80

QUICK REFERENCE GUIDE


This Quick Reference Guide DOES NOT replace the Operators Manual. You MUST read ALL the disclaimers and safety and other instructions in the Operators Manual before initially operating this product. Accordingly, no legal claims can be entertained based on the data, illustrations or descriptions in this Quick Reference Guide.

BEST PRACTICES


1. Carry a load as low as possible while maintaining good visibility.
2. Forks should be tilted back when in transport – with or without a load, cradle the load.
3. Fork tips should be on the ground when unit is parked.
4. Rather than driving into the load, extend the boom to easier see the forks in the load.

Static Dimensions


Machine model	JCB Series III					
	536-95 AgriPlus	538-60 Agri	538-60 AgriPlus	542-70 AgriPlus	542-70 AgriSuper	560-80 AgriSuper
A Overall height	ft-in 8-2	8-2	8-2	8-2	8-2	8-5
B Overall width over tires	ft-in 7-8	7-6	7-6	7-8	7-8	8-4
C Inside width of cab	ft-in 3-1	3-1	3-1	3-1	3-1	3-1
D Front track	ft-in 6-2	5-11	5-11	5-11	5-11	6-6
E Wheelbase	ft-in 9	9	9	9	9	9
F Overall length to front tires	ft-in 14-4	13-3	13-3	14-4	14-4	14-6
G Overall length to front of carriage	ft-in 14-7	14-11	14-11	14-7	14-7	17-3
H Ground clearance	ft-in 0-16	0-16	0-16	0-16	0-16	0-15

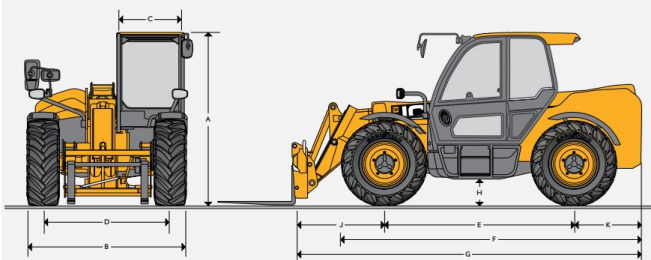


Lifting and Tie Down Points

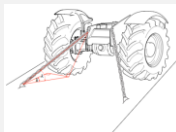

Front Anchor
Points

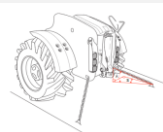


Rear Anchor
Points

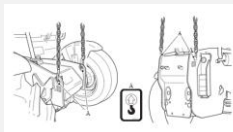


Lifting Points

Cab and Switch Panel

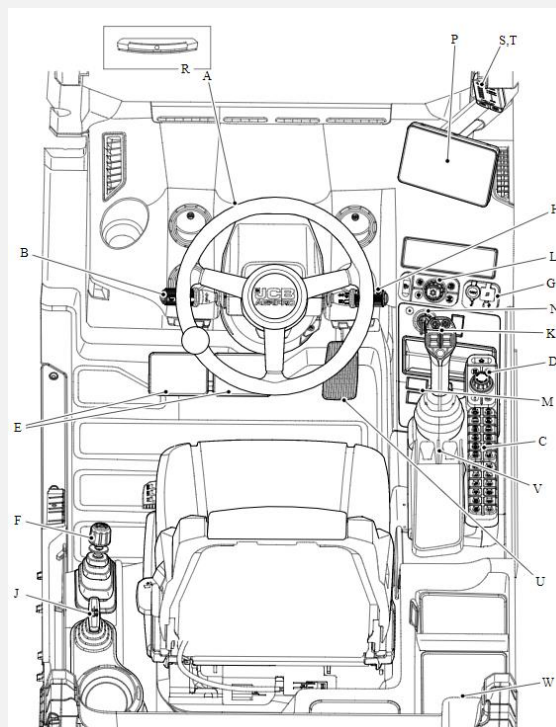


- A. Steering wheel
- B. Main transmission lever
- C. Switch packs
- D. Rotary controller
- E. Service brake/inching pedal
- F. Park brake lever
- G. Power socket/Media input (option)
- H. Wipers and lights lever
- J. Hydraulic tow hitch lock release cable
- K. Joystick/lever
- L. HVAC
- M. Option switches
- N. Ignition switch
- P. Instrument panel
- R. Inclinator
- S. LLMI
- T. Load control system
- U. Drive pedal
- V. Hand throttle and vari-speed mini levers
- W. Power socket (option)

Instrument Panel

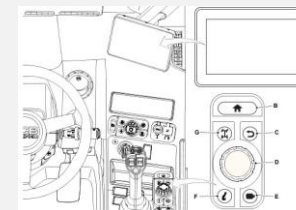

- A. Display
- B. Home button
- C. Back Button
- D. Rotary control switch pack
- E. Camera button (option)
- F. Information button
- G. Steer mode button

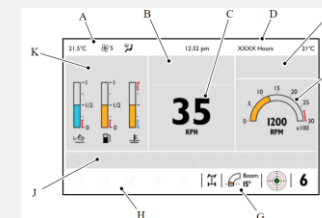

- A. Upper ribbon – HVAC
- B. Lights and direction indicator lamps
- C. Travel speed
- D. Upper ribbon – time, machine hours, outside temperature
- E. Engine and machine lamps
- F. Engine speed
- G. Lower ribbon – steering mode, boom angle, machine level, gear position, machine status, transmission status
- H. Lower display ribbon – Warnings
- J. Machine lamps
- K. DEF

Start Up Sequence

1 Insert Isolator Key (A)
Insert battery isolator key switch, push and turn 90 (degrees symbol)

2 Disarm the immobiliser
If installed, key in the 4 digit PIN code

3 Set to Neutral
Put the forward / reverse lever into neutral.


4 Press and Hold the Brake Pedal (E)

5 Start Machine
Turn the ignition key to the start position (position III) and hold it there until the engine starts.

6 Operate Hydraulics
Operate the hydraulic services to make sure that each function is working correctly and to help warm up the hydraulic system.




Boom Controls

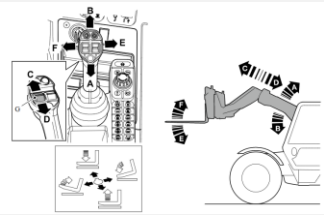



- A. Boom Raise
- B. Boom Lower
- C. Boom Extend
- D. Boom Retract
- E. Carriage tilt forward
- F. Carriage tilt back
- G. Extend/retract

Auxiliary Control

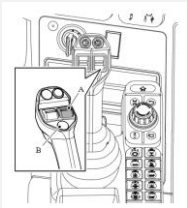


- A. Thumb switch
- B. Auxiliary Button

Cab Controls

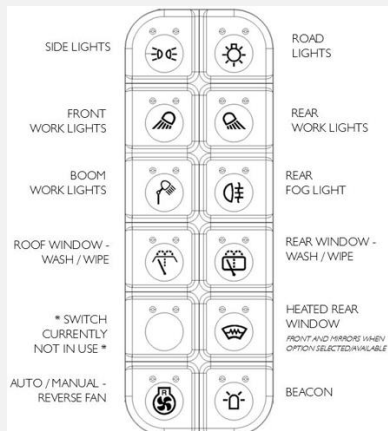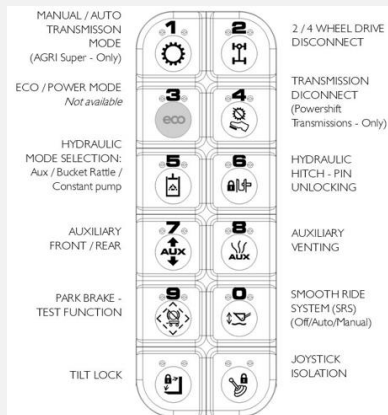


Gear Lever

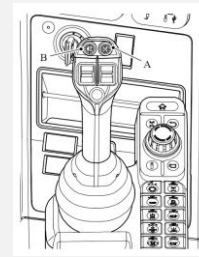

- A. Gear up shift button
- B. Gear downshift button


Service Points

Engine Compartment

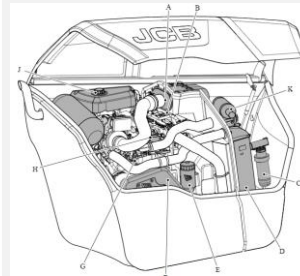


- A. Air Filter
- B. Transmission Oil Dipstick
- C. Water Separator
- D. Radiator
- E. Engine Oil Filter
- F. Drive Belt Guard
- G. Engine Oil Dipstick
- H. Engine Oil Filler Cap
- J. Coolant Expansion Tank
- K. Air Filter Blockage Indicator

 
Hydraulic Oil Level Indicator



- A. Hydraulic oil level indicator
- B. Label - Hydraulic oil filling point
- C. Hydraulic tank filler cap

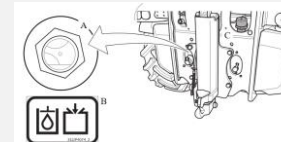


Chassis Leveling

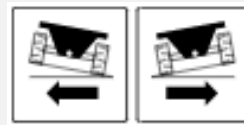

- Sway left – push and hold switch
- Sway right – Push and hold switch

Vehicle Steer Mode

1. Stop the machine. Set the gear lever to the neutral position
2. Use the switch (A) to select the steering mode:
 - B. 4 wheel steer
 - C. 2 wheel steer
 - D. Crab steer
3. Turn steering wheel until the front wheels are in the straight ahead position

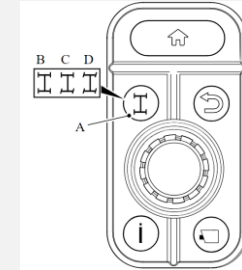

Connecting Attachments

