


TC002: Deep Sea DSE Suite Engine Files

When loading a backup or settings file may receive an error about not having the correct engine file. To load this, you will need to do the following:


Step 1: Have the model specific DSE Engine file supplied by JCB. These are located here if you have Servicemaster loaded on your computer: **C:\JCB_Servicemaster_2\Machine SW\GenSet\RS\T4F**

Note: Photos below are for reference only make sure to use the correct! Use the PDF at the bottom of this folder to get the correct file.

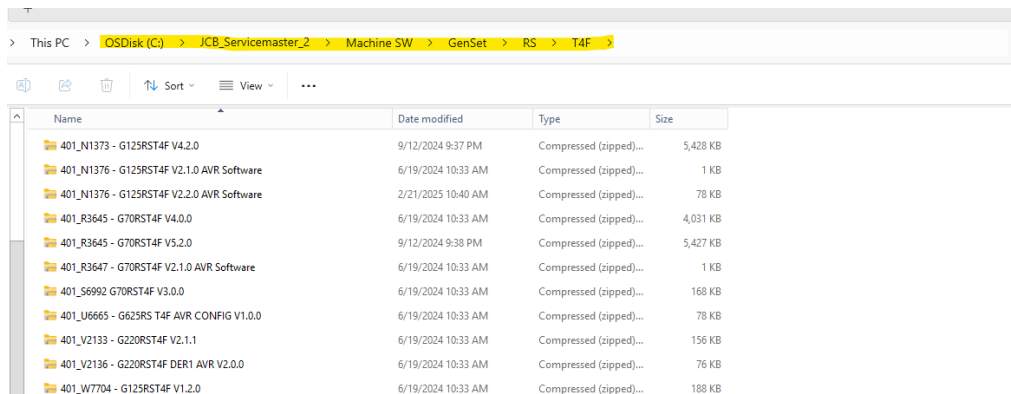


Screenshot 1: JCB Generator Controller File folder within Servicemaster

Step 2: Open the “Engine File” folder and copy the .dll file.

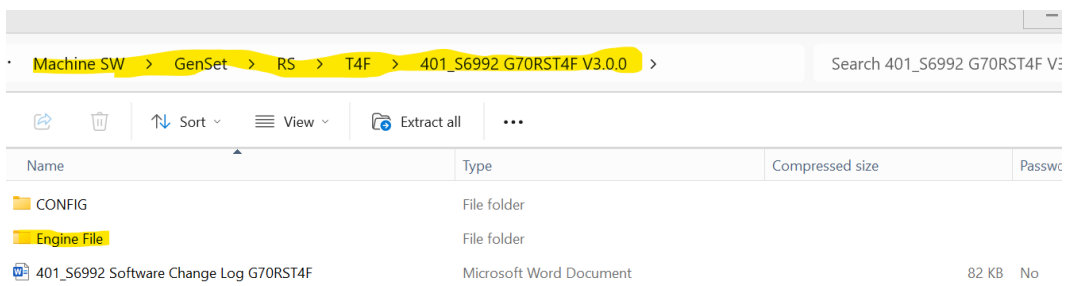

Screenshot 2: Example of the JCB Generator Controller File opened up.

 


Screenshot 3: Example of the engine file to copy.

TECH TIP – Power Products Controller



Step 3: Paste the file you just copied to this folder: **C:\Program Files (x86)\Deep Sea Electronics Plc\DSE Configuration Suite\Engine Files**

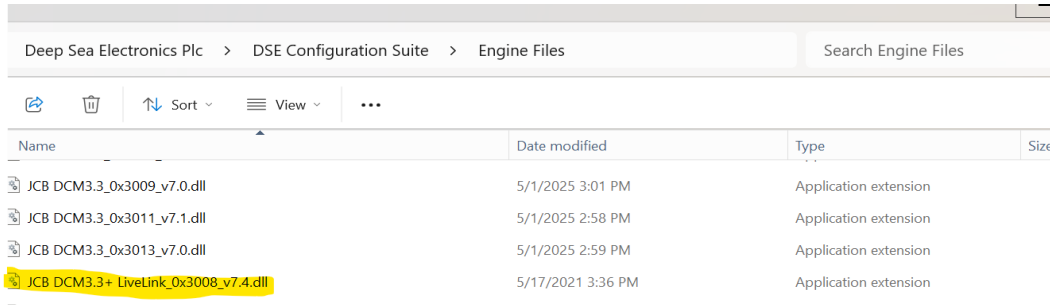

Screenshot 4: Example of the engine file folder within the DSE software files.

Step 4: Close out of the DSE Configuration Suite software and restart once you've pasted the file in the location above. Reopen the software, reconnect to the controller and you should now be able to write the backup or setting's files to the controller.